



## Caster

This caster has three parts,

- Ball (steel or plastic)
- Socket and
- Technic axle joiner.




Assembled Caster will look like this:

### How to replace the ball from caster

Gently pull out and remove the 'Technic Axle Joiner' from the top of the caster.



Using a Technic Axle push the ball from the top of the socket.

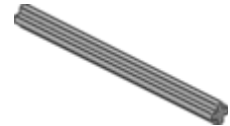

Insert a new ball from the bottom of the socket and gently press until it snaps in the socket.